

Contents

| | | |
|-----------|---|------|
| SECTION 1 | Introduction | |
| | Welcome | 1-1 |
| | Before You Fly | 1-2 |
| | About this Guide | 1-4 |
| SECTION 2 | System Overview | |
| | General Description | 2-1 |
| | System Configuration | 2-3 |
| | Cold Soak Startup Instructions | 2-4 |
| | Operational Warnings | 2-5 |
| | Acronyms and Abbreviations | 2-7 |
| | Coloring Conventions | 2-14 |
| | Caution/Warning/Advisory System | 2-16 |
| | Displays | 2-29 |
| | Controls | 2-29 |
| | Database and Software Updates | 2-32 |
| | Air Data and Attitude Heading Reference Systems | 2-39 |
| | ADC, AHRS, and ADAHRS | 2-39 |
| | GPS/WAAS Receiver | 2-40 |
| | Analog Interface Unit (AIU) | 2-42 |
| | Input Signals | 2-43 |
| | Autopilot Output Signals | 2-43 |
| | Remote Bugs Panel | 2-44 |
| | Component Failure Modes | 2-46 |
| SECTION 3 | Display Symbology | |
| | PFD Symbology | 3-2 |
| | Basic PFD | 3-3 |
| | PFD on Instrument Approach | 3-4 |
| | PFD on Instrument Approach (cont.) | 3-5 |

| | |
|--|-------|
| Unusual Attitude Recovery Mode | 3-6 |
| Navigation Display Symbology | 3-77 |
| Basic Moving Map | 3-78 |
| Moving Map with Instrument Approach. | 3-79 |
| Moving Map with STAR. | 3-80 |
| North-Up Arc Mode | 3-81 |
| North-Up Centered Mode | 3-81 |
| Heading-Up Centered Mode | 3-82 |
| Conventional HSI/PTR Format. | 3-83 |
| Lightning Display | 3-84 |
| Navigation Log Display | 3-85 |
| Traffic Display | 3-86 |
| Datalink Display | 3-87 |
| Failure Modes | 3-142 |

SECTION 4 Rotorcraft Display Symbology

| | |
|--------------------------|-----|
| Rotorcraft PFD | 4-2 |
| Rotorcraft MFD | 4-8 |

SECTION 5 Button/Menu Functions

| | |
|--|------|
| Overview | 5-1 |
| Top Level Menu | 5-3 |
| General | 5-3 |
| PFD Screen First Soft Menu Level | 5-7 |
| MFD Screen First Soft Menu Level | 5-8 |
| Flight Plan (FPL) Menu | 5-9 |
| Active Flight Plan (ACTV) Menu. | 5-10 |
| Information (INFO) Menu | 5-17 |
| Omnibearing Selector (OBS) Menu | 5-20 |
| Heading Bug (HDG) Menu. | 5-21 |
| Nearest (NRST) Menu | 5-22 |
| Direct Menu. | 5-25 |
| Timer (TIMER) Menu. | 5-27 |
| PFD Bug (BUGS) Menu | 5-28 |
| PFD Declutter (DCLTR) Menu. | 5-31 |
| PFD Altimeter Menu. | 5-33 |
| MFD Fault Display (FAULTS) Menu | 5-35 |
| MFD Fuel Totalizer Quantity Setting (SET FUEL) Menu | 5-37 |

MFD Function (FUNCTION) Menu 5-38
MFD ND Screen Format (FORMAT) Menu 5-39
MFD HSI Pointer (POINTERS) Menu 5-42
MFD Strike Format (FORMAT) Menu 5-43
MFD Traffic Format (FORMAT) Menu 5-44
MFD Datalink Format (FORMAT) Menu 5-46

SECTION 6 Step-by-Step Procedures

Setting Altimeter 6-1
Setting Fuel Quantity 6-2
Flight Plans 6-3
 Create and Store a Flight Plan 6-4
 Activate a Stored Flight Plan 6-7
 Edit a Stored Flight Plan 6-8
 Reverse a Stored Flight Plan 6-11
 Delete a Stored Flight Plan 6-13
 Transfer Flight Plans Between Aircraft 6-14
Waypoints 6-16
 Nearest Waypoint 6-16
 Direct to Any Waypoint 6-18
 Recenter on Route 6-20
 Activate a Waypoint within an Active Route 6-21
 Add a Waypoint or Airway to an Active Route 6-23
 Delete a Waypoint From an Active Route 6-25
 Creating a Non-Published Holding Pattern 6-26
 Create a User Waypoint 6-28
 Edit a User Waypoint 6-34
 Waypoint Information (NavData and
 DataLink Weather) 6-37
 Transfer User Waypoints Between Aircraft 6-39
Using Airways 6-41
Approaches, DPs, and STARS 6-44
 Select a VFR Approach 6-44
 Select an IFR Approach 6-48
 Select a DP or STAR 6-52
 Missed Approach Arming Procedure 6-55
Parallel Track Function 6-57
Omnibearing Selector Function 6-59
 HSI and CDI/ANNUNCIATOR Source Selection 6-59

- Automatic OBS – GPS 6-61
- Manual OBS – GPS. 6-62
- VOR OBS – HSI 6-63
- Timer Functions 6-64
 - Count Up 6-64
 - Count Down 6-65
 - Flight Timer. 6-66
 - Turn the Timer Off 6-66
- BUG Functions
 - (Heading, Altitudes, Airspeed, V-Speeds) 6-67
 - Set the Heading Bug 6-67
 - Specify a Target Altitude Bug. 6-69
 - Specify a Minimum Altitude. 6-71
 - Specify a Decision Height. 6-72
 - Specify a Target Airspeed. 6-73
 - Specify a Vertical Speed 6-73
 - Turn Bugs Off. 6-75
 - Set V-Speeds 6-75
- Vertical Navigation (VNAV) 6-76
 - Change VNAV Angles 6-76
 - VNAV Altitudes 6-76
- Controlling The Displays 6-81
 - Change MFD Display Pages 6-81
 - Show/Hide Terrain (Moving Map) 6-81
 - Show/Hide LAT/LON (Moving Map) 6-82
 - Show/Hide VOR and ADF Pointers (Moving Map). 6-82
 - Show/Hide VOR and ADF Pointers on
 - Conventional HSI 6-83
 - Show/Hide Strikes (Moving Map) 6-84
 - Scale the Moving Map 6-84
 - Change Moving Map Format 6-85
 - Change Moving Map Function 6-87
 - Declutter the Moving Map 6-88
 - Auto Declutter Navigation Symbology. 6-89
 - Declutter The PFD 6-89
 - Zoom the PFD. 6-90
- Controlling the Stormscope Display 6-92
 - Centered or Arc Format. 6-92
 - Route On or Route Off 6-92
 - Strike or Cell Mode. 6-92

| | |
|--|-------|
| Clear Strikes | 6-93 |
| Strike Test | 6-93 |
| Controlling the NAV Log Display | 6-94 |
| Controlling the Traffic Display | 6-95 |
| Route On or Route Off | 6-95 |
| Traffic Test | 6-95 |
| Optional ADS-B Datalink and Traffic | 6-96 |
| Controlling the Datalink Display | 6-100 |
| Tuning Radios using the EFIS | 6-105 |
| Analog Autopilot Interface | 6-106 |
| Departure, Enroute, and Arrival Procedures | 6-106 |
| Non-precision approaches | 6-107 |
| Precision approaches | 6-107 |
| Vectors to final | 6-108 |
| Missed approaches | 6-108 |
| Digital Autopilot Interface | 6-111 |

SECTION 7 Quick Start Tutorial

SECTION 8 IFR Procedures

| | |
|--|------|
| Overview of Approaches | 8-1 |
| Basic Instrument Approach Operation | 8-2 |
| Approaches with Course Reversals | 8-15 |
| Approaches with DME Arcs | 8-21 |
| Vectors to Final (VTF) | 8-25 |
| ILS Approaches | 8-27 |
| Missed Approaches | 8-32 |
| Non-Published Holds | 8-35 |
| Departure Procedures (DPs) | 8-37 |
| Standard Terminal Arrival Routes (STARs) | 8-41 |

SECTION 9 Appendix

| | |
|-------------------------------|-----|
| Emergency/Abnormal Procedures | 9-1 |
| Emergency Procedures | 9-1 |
| Abnormal Procedures | 9-2 |
| Normal Procedures | 9-4 |
| Power Up and Self Test | 9-4 |
| Operation | 9-4 |
| Operating Tips | 9-9 |

| | |
|--|------|
| Descent Planning | 9-9 |
| Terrain Clearance | 9-9 |
| Departure Airport Information | 9-9 |
| Pattern Entry | 9-10 |
| Zoom Mode | 9-10 |
| Unique Names for Flight Plans | 9-10 |
| Your Instrument Scan | 9-11 |
| TAWS (Terrain Awareness and Warning System) | |
| Functions | 9-12 |
| Jeppesen NavData Chart Compatibility | 9-38 |
| Aeronautical Information Compatibility | 9-38 |
| Navdata Name Conventions: Waypoint Identifiers | 9-41 |
| Data Logging and Retrieval | 9-52 |
| Overview | 9-52 |
| Data Format | 9-53 |
| Service Difficulty Report | 9-54 |
| Limited Warranty | 9-55 |

Index